


Vehicle: Connector Views

Control Unit Connector (Plug 1)

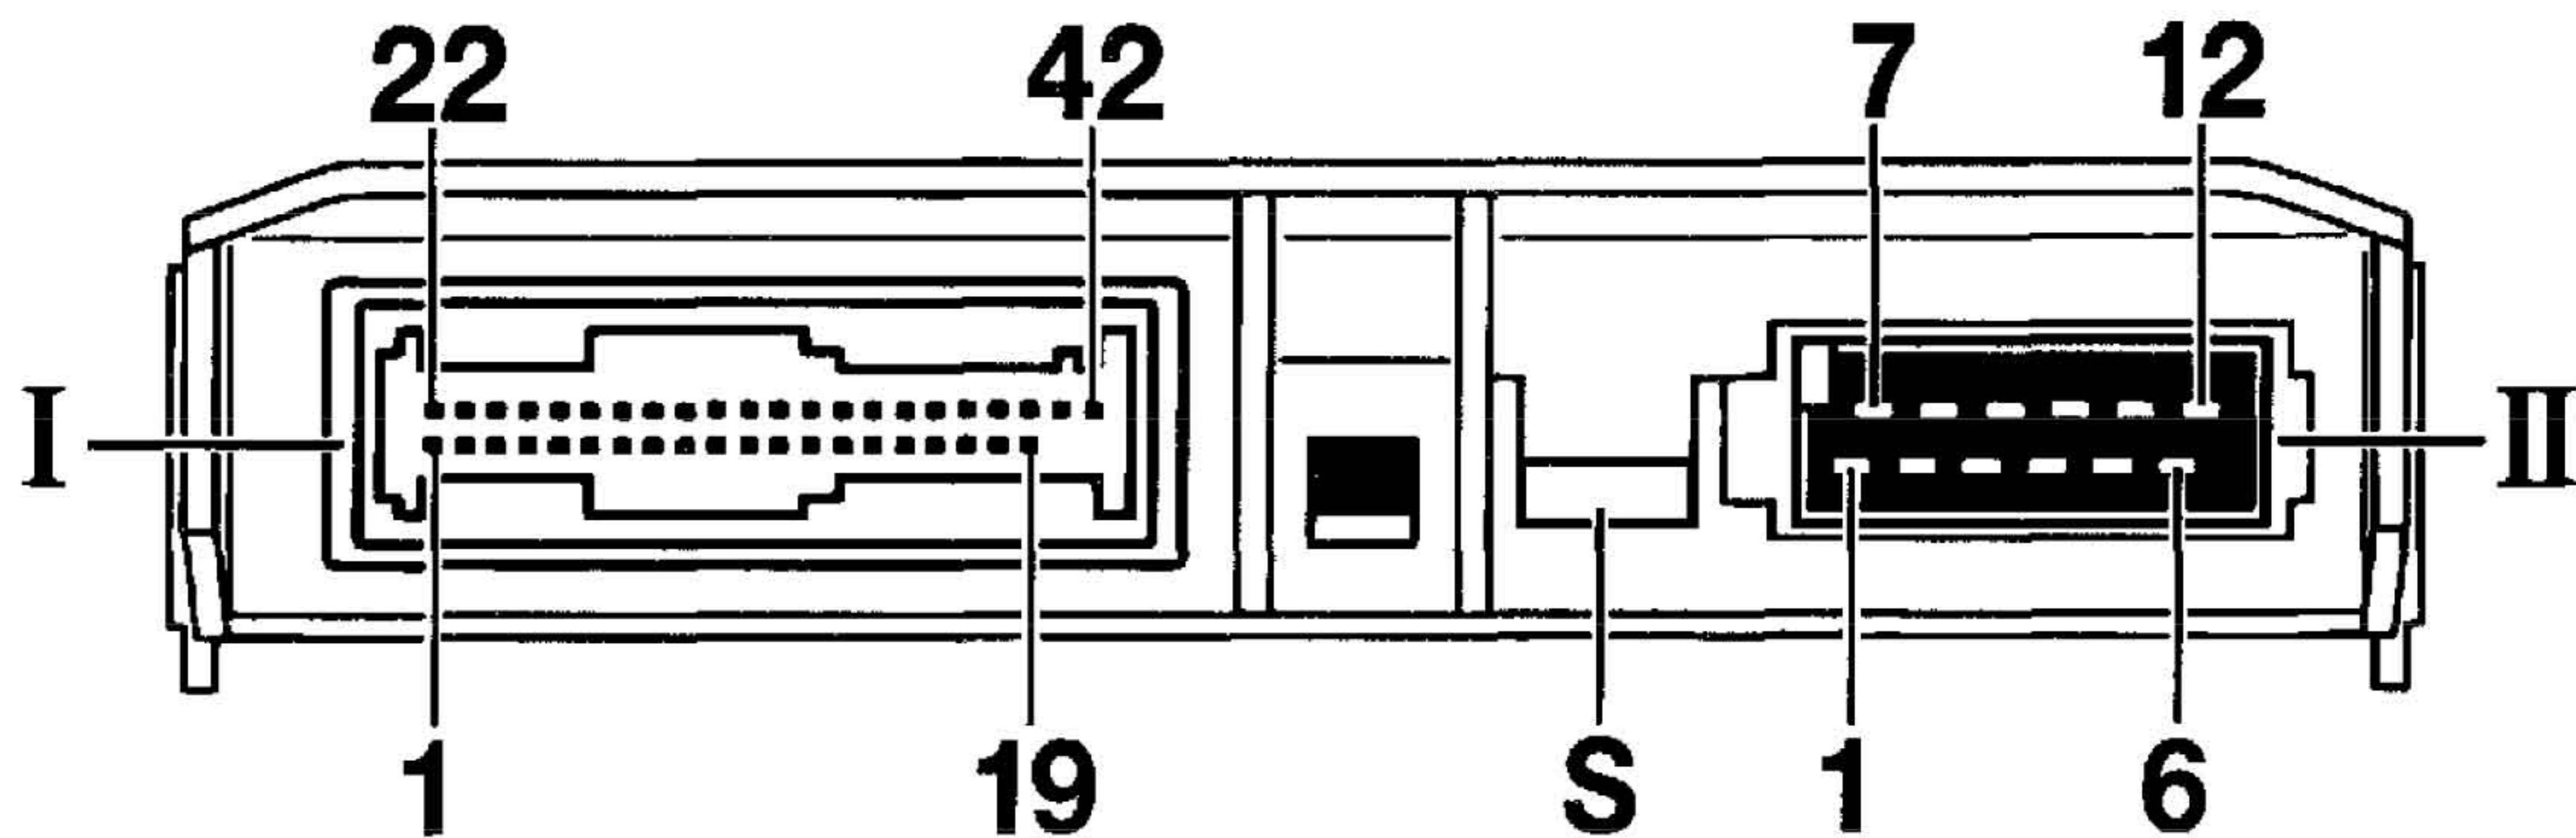


Terminal:

- 1 - Antenna
- 2 - K-lead
- 3 - Immobilizer data
- 4 - Immobilizer control
- 5 - Driver's door secured
- 6 - Convertible top closed
- 7 - Driver's door closed
- 8 - Passenger compartment monitoring on
- 9 - Convertible top compartment lid
- 10 - Central locking button open
- 11 - External input 1
- 12 - Free
- 13 - Luggage compartment lid, rear
- 14 - External input 2
- 15 - Deactivation
- 16 - Terminal 86 S (buzzer contact)
- 17 - Luggage compartment light, rear
- 18 - Power window control
- 19 - Free
- 20 - Free
- 21 - Free
- 22 - Antenna (shield)
- 23 - W-lead
- 24 - Passenger compartment monitoring, signal input
- 25 - Driver's door closed
- 26 - Oddments tray
- 27 - Radio contact
- 28 - Passenger's door secured
- 29 - Central locking button closed
- 30 - Driver's door locked
- 31 - Luggage compartment lid, front
- 32 - Passenger's door locked
- 33 - Input, crash sensor
- 34 - Release, luggage compartment lid, rear
- 35 - Priming
- 36 - Terminal 15
- 37 - Luggage compartment light, front
- 38 - Free
- 39 - Alarm readiness light
- 40 - Comfort, opening
- 41 - Indicator, door locked
- 42 - Comfort, closing

Vehicle: Connector Views

Control Unit Connector (Plug 2)

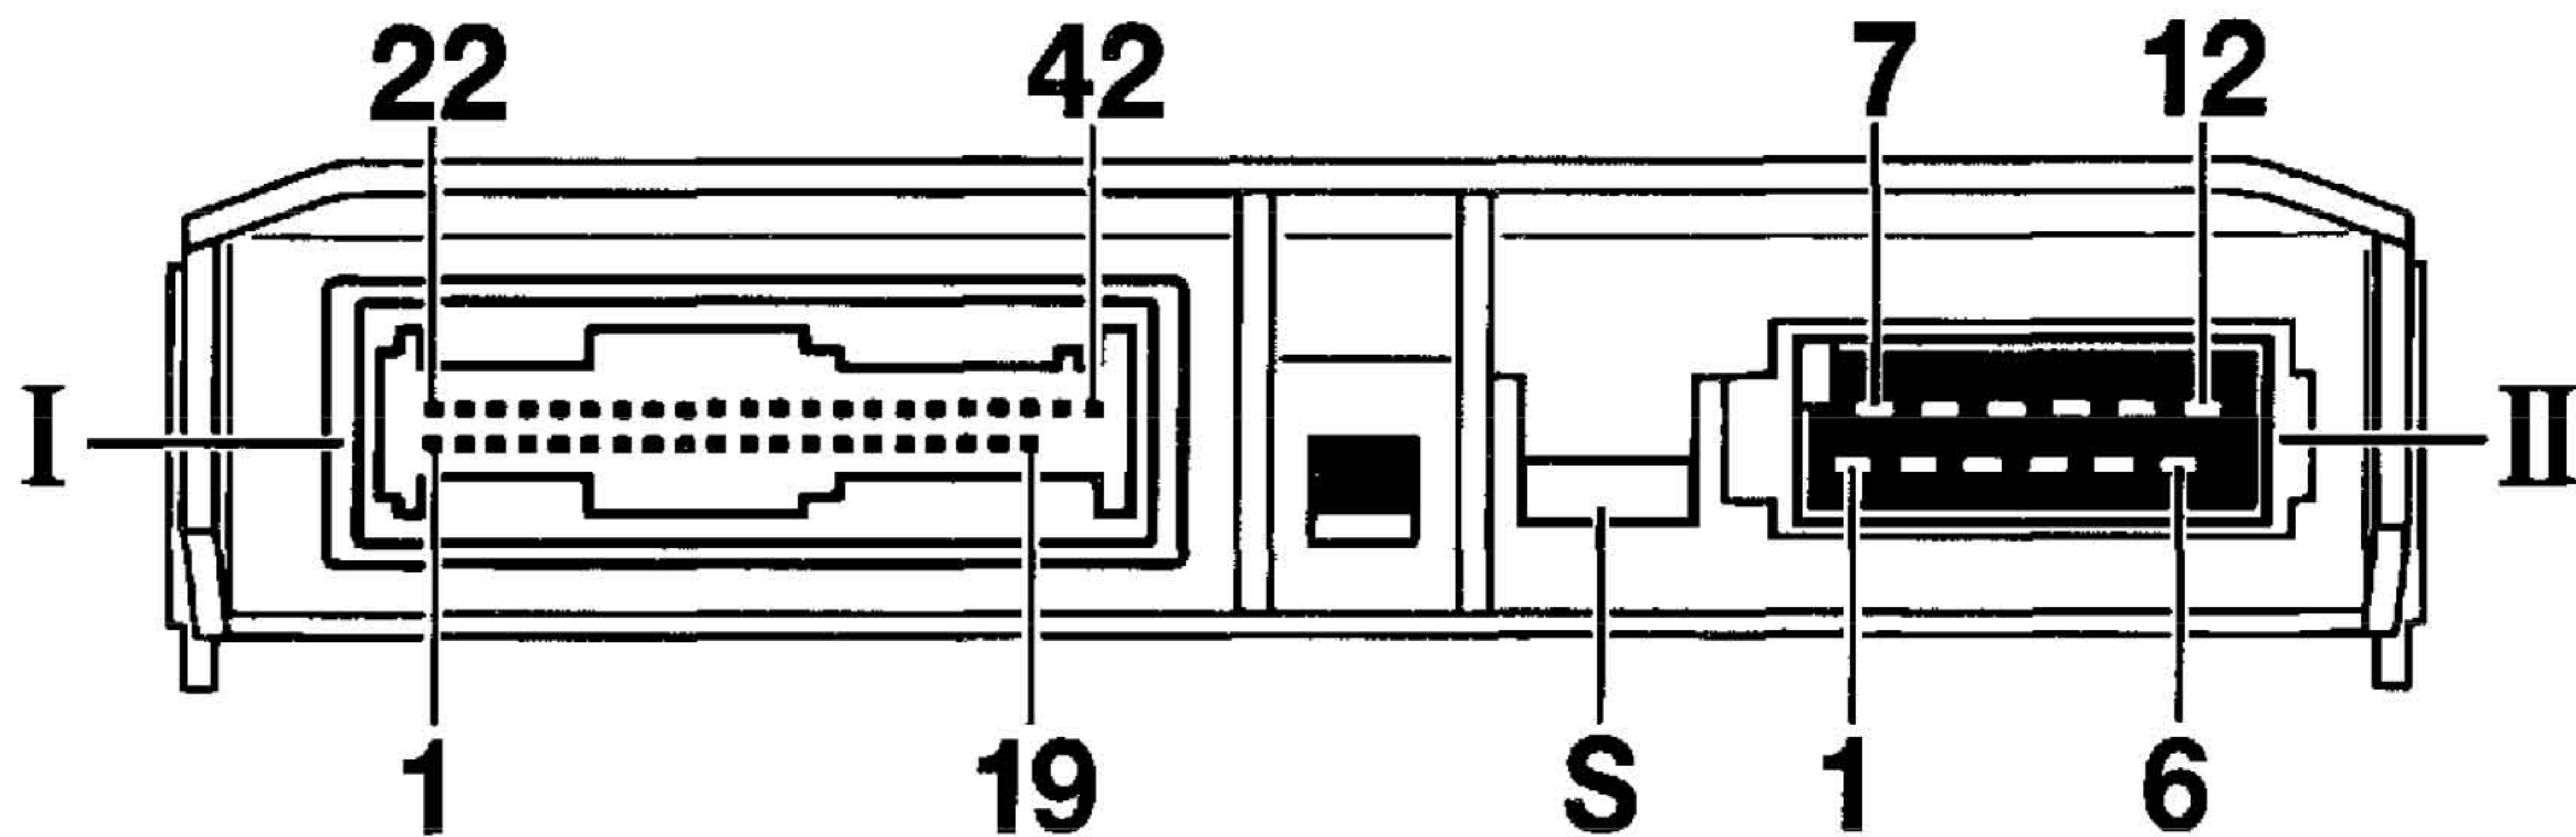

Terminal:

- 1 - Terminal 31
- 2 - Positive, alarm horn
- 3 - Servo motor, central locking system
- 4 - Load disconnection
- 5 - Actuator, tank cap
- 6 - Direction indicator light, left
- 7 - Terminal 30 input
- 8 - Terminal 30 output
- 9 - Servo motor, central locking system
- 10 - Actuator, tank cap
- 11 - Interior light
- 12 - Direction indicator light, right